


INFO 3 Display

INFO 3 display contains the following:

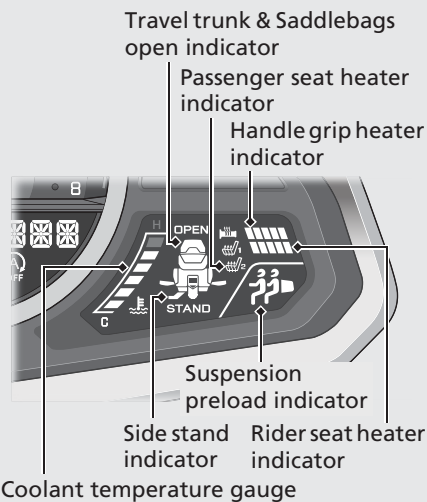


- Coolant temperature gauge (🌡️) ➔ P. 41
- Travel trunk **GL1800/D/DA** & Saddlebags open indicator ➔ P. 41
- Side stand indicator ➔ P. 42
- Handle grip heater indicator (👤) ➔ P. 42

- **GL1800/D/DA**
Rider seat heater indicator (👤/1) ➔ P. 42
- **GL1800/D/DA**
Passenger seat heater indicator (👤/2) ➔ P. 43
- **GL1800/D/DA**
Suspension preload indicator (👤) ➔ P. 43

Coolant Temperature Gauge (🌡️)

When the coolant is over the specified temperature, the 6th (H) segment flashes and the high coolant temperature indicator comes on.

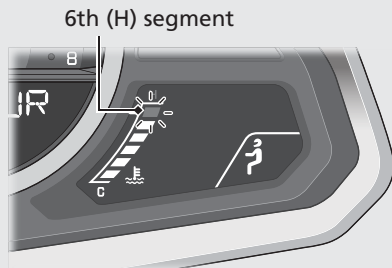


If the 6th (H) segment flashes while riding: ➔ P. 174

If the all segments flashes: ➔ P. 180

Travel Trunk **GL1800/D/DA** & Saddlebags Open Indicator

The segment(s) of open component(s) flashes with the "OPEN" indicator when your motorcycle's travel trunk and/or saddlebags are open.

Travel trunk open **GL1800/D/DA**

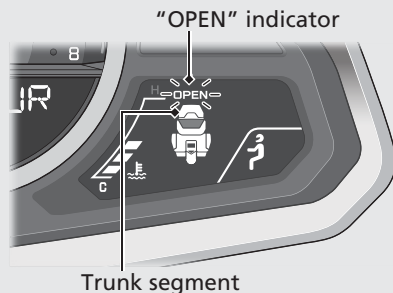

Saddlebag open

