




GL1800/B

Headlight dimmer switch

- ▲  : High beam
- ▼  : Low beam
-  PASS : Flashes the high beam headlight.

VOL lever

Push up or down to adjust the audio system volume.

➡ P.71

(Voice control) switch

- Press to receive, reject or end a call. ➡ P.102
- Starts Siri if Apple CarPlay is available. ➡ P.101

Horn button**4-way key/ENT switch**

- Press the 4-way key switch in the ▲ / ▼ / ◀ / ▶ directions to select the available choices.
- Press **ENT** switch to set your selection. ➡ P.24

Windscreen adjusting lever

Push up or down to adjust the windscreen height. ➡ P.134

(Home) switch

Press to return to the Home screen. ➡ P.24

(Back) switch

Press to return to the previous screen. ➡ P.24


(Source/Private Mode) switch

- Press to change the audio mode. ➡ P.71
- Press and hold to enable/disable the private mode. ➡ P.88

R Reverse mode switch Except GL1800B USA model

Press to enter the reverse mode. ➡ P.117

Reverse button Except GL1800B USA model

 **Turn signal switch** While pressing the switch, your motorcycle will back up in the reverse mode. ➡ P.117

- The turn signal will automatically stop when you complete the turn.
- When used for a lane change, the turn signal automatically stops after 7 seconds or after riding 131 yards (120 m).
- You can manually cancel the turn signal by pressing the switch in.
- In some cases, the timing at which the turn signal stops is changed.
- Always use the recommended tires to ensure correct automatic cancellation operation.

To enable or disable the turn signal automatic cancellation: ➡ P.28