

## Switches (Continued)

### Right handlebar


GL1800BD/D/DA

#### A/M switch

Shifts between AT MODE and MT MODE. ➔ P.114

#### Hazard switch


Switchable when the ignition switch is ON. Can be turned off regardless of the ignition switch position.


- ▶ The signals continue flashing with the ignition switch in OFF or  (Lock) after the hazard switch is on.

#### MODE button

Changes the riding mode. ➔ P.118

#### Engine stop switch/ Start button

Should normally remain in the  (Run) position.

- ▶ In an emergency, switch to the  (Stop) position to stop the engine.
- ▶ Press the start button to start the engine. ➔ P.110

#### Idling stop button

Canada model only

- ▶ Press to switch the Idling Stop system on or off while engine is running. ➔ P.61

#### N switch

Shifts in Neutral. ➔ P.114

#### D switch

Shifts to drive in AT MODE. ➔ P.114

#### Cruise control lever

Push up or down to set the speed or adjust the set speed. ➔ P.121

#### Cruise control main switch

Press to activate the cruise control system. ➔ P.121

