

Honda SMART Key System *(Continued)*

Anyone in possession of the Honda SMART Key can perform the following operations if the Honda SMART Key is within the system's operating range:

- Unlocking the steering lock ➔P.55
- Activating the electrical system ➔P.58
- Starting the engine ➔P.110
- Operating the audio system ➔P.67 and other accessories.
- Opening the travel trunk, saddlebags and fairing pocket ➔P.126

You should always keep the Honda SMART Key on your person when you get on and off the motorcycle or while riding.

Do not place the Honda SMART Key in the travel trunk (GL1800/D/DA), saddlebags, shelter case (Except GL1800DA) or fairing pocket.


If the ignition switch is ON, the motorcycle can be operated even by a person who does not have a verified Honda SMART Key.

Whenever you leave your motorcycle, turn the ignition switch to OFF and lock the steering. ➔P.58

Operating the Ignition Switch

To Activate the Electrical System

- 1 Make sure that the Honda SMART Key is activated and enter the operating range for the motorcycle. ➔P.57
- 2 Turn the ignition switch to ON. ➔P.49
 - ▶ The electrical system activates and the engine can be started.

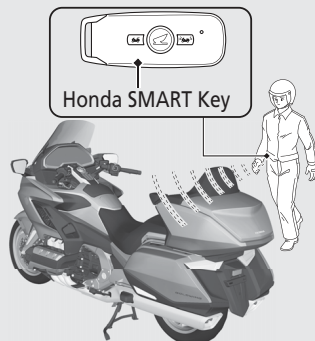

To Turn Off the Electrical System

- 1 Turn the ignition switch to OFF or **i** (Lock). ➔P.49
 - ▶ The windscreen moves to the lowest position automatically.
- 2 Leave the operating range with the Honda SMART Key ➔P.57 or switch the Honda SMART Key system to deactivation. ➔P.56

Always make sure the ignition switch is OFF.

If the Honda SMART Key System Does Not Work Properly ➔P.184