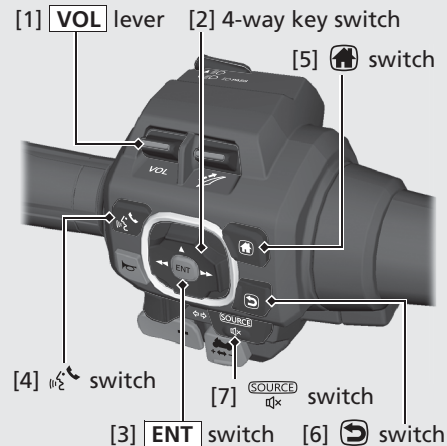


Audio System (Continued)

Left Handlebar




[1] **VOL** (volume control) lever: Push the lever up to increase the volume.


- To increase the volume: Push the lever up.
- To decrease the volume: Push the lever down.
- To increase the volume rapidly: Push up and hold the lever.
- To decrease the volume rapidly: Push down and hold the lever.


[2] 4-way key switch: Press right, left, up or down to select a menu item.


- When listening to the radio
 - Press **▶▶**: Selects the next preset radio station.
 - Press **◀◀**: Selects the previous preset radio station.
 - Press and hold **▶▶**: Selects the next station with strong reception.
 - Press and hold **◀◀**: Selects the previous station with strong reception.
- When listening to an iPod, USB flash drive or *Bluetooth*® audio
 - Press **▶▶**: Skips to the next song.
 - Press **◀◀**: Goes back to the beginning of the current or previous song.
- When listening to a USB flash drive
 - Press and hold **▶▶**: Skips to the next folder.
 - Press and hold **◀◀**: Goes back to the previous folder.

[3] **ENT** switch: Press to set your selection.

 

[4]  (Voice control) switch: Press to receive, reject or end a call. Starts Siri if Apple CarPlay is available.

[5]  (Home) switch: Select to go to the home screen.

[6]  (Back) switch: Press to return to the previous screen.

[7]  (Source/Private Mode) switch: Press to change the audio mode. Cycles through the audio modes as follows:

[FM] → [AM] → [SXM] (option) → [USB] → [iPod] → [Bluetooth] → [AUX] (option)

- When playing an audio
 - Press and hold  switch to mute the volume and to pause a track
- When receiving a call
 - Press and hold  switch to enable/disable the private mode.