

▶ **GL1800B/BD** On models equipped with the front speakers only, setting the fader level to a negative level means the output sound gradually becomes smaller.


▶ The fader setting does not affect the headsets output.

- 3 Return to the previous screen or the Home screen. ➡ P.24

Available setting range: Level -7 to +7
Default: Level 0

Auto Volume (Speaker)

Selects the volume setting to automatically increase volume from the speakers as the speed of the motorcycle increases.

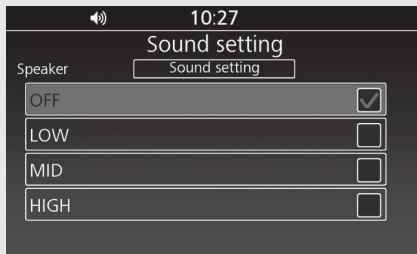


- 1 Select [Auto volume (Speaker)], and then press or **ENT** switch.
- 2 Rotate or press \blacktriangle / \blacktriangledown on the 4-way key switch, and then press or **ENT** switch to set your selection.
- 3 Return to the previous screen or the Home screen. ➡ P.24

Available settings: [OFF]/[LOW]/[MID]/[HIGH]
Default: [OFF]

Auto Volume (Headset)

Selects the volume setting to automatically increase volume from the headsets as the speed of the motorcycle increases.

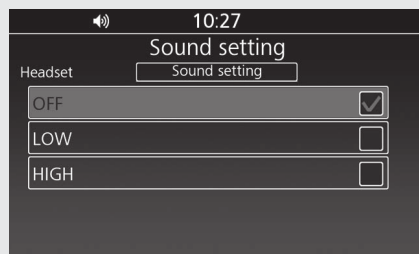

- 1 Select [Auto volume (Headset)], and then press or **ENT** switch.
- 2 Rotate or press \blacktriangle / \blacktriangledown on the 4-way key switch, and then press or **ENT** switch to set your selection.
- 3 Return to the previous screen or the Home screen. ➡ P.24

Available settings: [OFF]/[LOW]/[HIGH]
Default: [OFF]