

Language

Changes the system language.



- 1 Select [Language], and then press or **ENT** switch.
- 2 Rotate or press \blacktriangle / \blacktriangledown on the 4-way key switch to select the display language that you want to use on the screen, and then press or **ENT** switch to set your selection.
- 3 Return to the previous screen or the Home screen. P.24


Available languages: [US English]/

[CA Francois]/[NA Espanol]

Default: [US English]

TTS Language

Changes the TTS (text-to-speech) language.

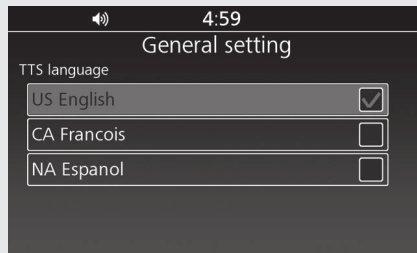

- 1 Select [TTS language], and then press or **ENT** switch.
- 2 Rotate or press \blacktriangle / \blacktriangledown on the 4-way key switch to select the TTS language to use the navigation, and then press or **ENT** switch to set your selection.
- 3 Return to the previous screen or the Home screen. P.24


Available languages: [US English]/

[CA Francois]/[NA Espanol]

Default: [US English]

Clock

The audio system receives signals from GPS satellites, updating the clock automatically. You can also adjust the clock manually.

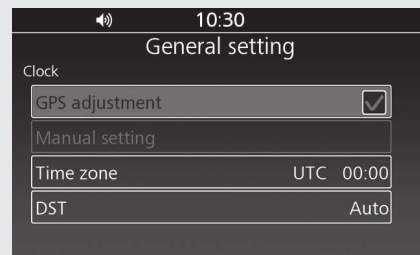

To enable/disable GPS adjustment function:

- 1 With [GPS adjustment] selected, press or **ENT** switch to select (enable) or deselect (disable) the function.
- 2 Return to the previous screen or the Home screen. P.24

Default: On (selected)