

## Audio System (Continued)

To adjust the clock manually:



- 1 Select [Manual setting], and then press or **ENT** switch.
- 2 The month section is selected. Rotate or press  $\blacktriangle / \blacktriangledown$  on the 4-way key switch until the desired month is displayed. Move or press  $\blacktriangleright$  on the 4-way key switch to set the month. The selection move to the day section.
- 3 Rotate or press  $\blacktriangle / \blacktriangledown$  on the 4-way key switch until the desired day is displayed. Move or press  $\blacktriangleright$  on the 4-way key switch to set the day. The selection move to the year section.
- 4 Rotate or press  $\blacktriangle / \blacktriangledown$  on the 4-way key switch until the desired year is displayed. Move or press  $\blacktriangleright$  on the 4-way key switch to set the year. The selection move to the hour section.

- 5 Rotate or press  $\blacktriangle / \blacktriangledown$  on the 4-way key switch until the desired hour is displayed. Move or press  $\blacktriangleright$  on the 4-way key switch to set the hour. The selection move to the minute section.
- 6 Rotate or press  $\blacktriangle / \blacktriangledown$  on the 4-way key switch until the desired minute is displayed. Move or press  $\blacktriangleright$  on the 4-way key switch to set the minute.
- 7 Return to the previous screen or the Home screen. P.24


Quick setting: Move / and hold, or press and hold  $\blacktriangle / \blacktriangledown$  on the 4-way key switch until the desired number appears.

The clock setting is 24-hour indication, but the clock display is 12-hour indication. The call history is 24-hours indication.

The clock will be reset to 12:00 when the battery is reconnected.

## Time Zone

Selects the offset of local time from UTC (Coordinated Universal Time). This function is disabled when [Manual setting] is selected. If you are in an area outside the range of the navigation map, [Auto] is disabled. When no GPS Signal such as in tunnel will also disable [Auto].

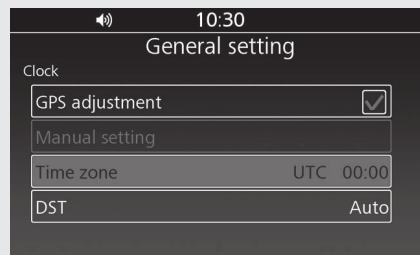

- 1 Select [Time zone], and then press or **ENT** switch.
- 2 Rotate or press  $\blacktriangle / \blacktriangledown$  on the 4-way key switch to select the time zone, and then press or **ENT** switch to set your selection.  
  
**Setting range:** [Auto] or [UTC-12:00] to [UTC +13:00]
- 3 Return to the previous screen or the Home screen. P.24