 
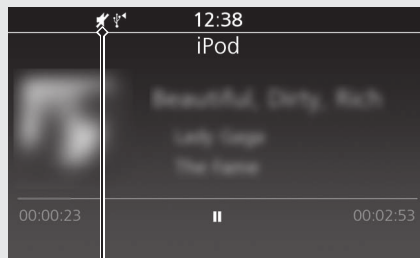 


### ■ To Pause a Track

Push and hold  switch to pause a track and mute the volume.


 
▶ A diagonal line appears in the audio output status icon on the screen.

 
 


Audio output status icon



To resume a track, operate **VOL** lever while volume is muted.


 
### ■ To Change a Track

To skip to the next track, move  or press  on the 4-way key switch.


To go back to the beginning of the current or previous track, move  or press  on the 4-way key switch.

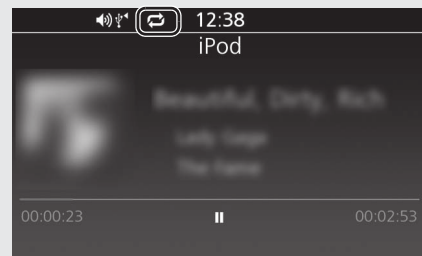 
### ■ To Change an Album (Folder)

To change to the next album (folder), move  and hold or press and hold  on the 4-way key switch.




To change to the previous album (folder), move  and hold or press and hold  on the 4-way key switch.

### ■ To Select the Play Mode

You can select repeat and random modes. To switch the mode, press and hold  or **ENT** switch.



### For iPod and Bluetooth® device playback

-  Album repeat play mode: Repeats all tracks in the current album.
-  Track repeat play mode: Repeats the current track.
-  Album random play mode: Plays tracks randomly from the current album.