


GL1800BD/D/DA

- 1 Check the parking brake ((P) parking brake indicator to come on).
- 2 Make sure the engine stop switch is in the (Run) position.
- 3 Unlock the steering. ➔P.55
- 4 Turn the ignition switch to ON. ➔P.49
 - ▶ Make sure the (N) indicator comes on. If the (N) indicator does not come on. ➔P.113

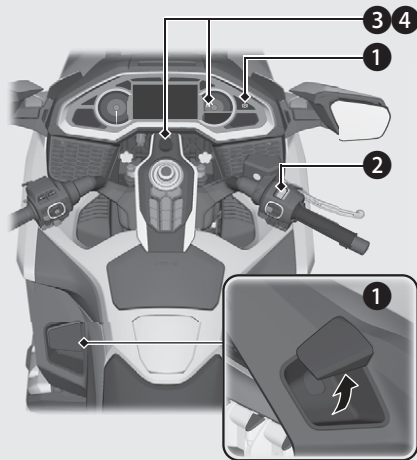

- 5 Press the start button with the throttle completely closed.
- 6 Make sure the parking brake lever is released before riding.



If the engine does not start:

- 1 Open the throttle fully and press the start button once.
- 2 Repeat the normal starting procedure.
- 3 If the engine starts, open the throttle slightly if idling is unstable.
- 4 If the engine does not start, wait 10 seconds before trying steps 1 & 2 again.

If Engine Will Not Start ➔P.173

Quick Engine Starting

You can also start the engine by the following procedure.

- 1 Make sure the status of the Honda SMART Key is active ➔P.56 and enter the operating range. ➔P.57
- 2 While applying the brake lever or pedal firmly, press and hold the start button until engine starts.
 - ▶ The steering lock is automatically unlocked at the same time.
 - ▶ **GL1800/B** The quick engine starting will not operate if the transmission is in gear. The quick engine starting can be operated by pulling in the clutch lever with the transmission in gear so long as the side stand is raised.

When You Stop the Engine

- 1 To stop the engine, put the gear to Neutral ((N) indicator comes on).
- 2 Turn the ignition switch to OFF.
 - ▶ **GL1800BD/D/DA** If you turn the ignition switch to OFF when the motorcycle is in gear, the engine will shut off with the clutch disengaged.
- 3 **GL1800BD/D/DA** Set the parking brake when you park the motorcycle. ➔P.60