



Battery

Removal


Make sure the ignition switch is turned to OFF.

After turning the ignition switch OFF, wait more than 60 seconds and then remove the negative cable of the battery. Because the electrical system may not function correctly.


1. Remove the left side cover. P. 152
2. Disconnect the negative \ominus terminal from the battery.
3. Disconnect the positive \oplus terminal from the battery.

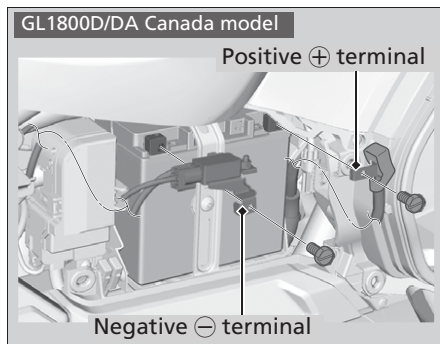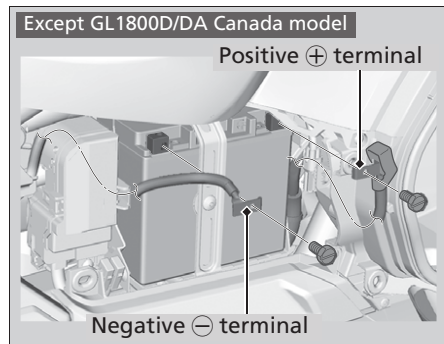

4. Remove the battery holder bolt.
5. Swing the battery holder as shown to avoid interference against the seat.

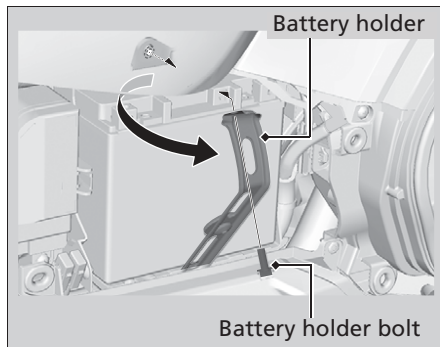

6. Remove the battery holder from the hook.
7. Remove the battery taking care not to drop the terminal nuts.

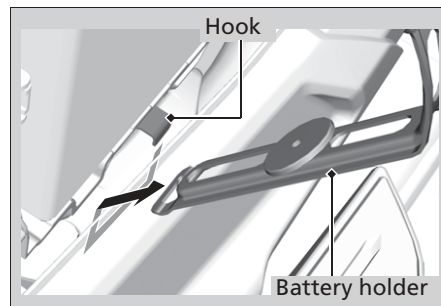

Installation

Install the parts in the reverse order of removal. Always connect the positive \oplus terminal first. Make sure that bolts and nuts are tight.

Make sure the clock information is correct after the battery is reconnected. P. 77

For proper handling of the battery, see "Maintenance Fundamentals." P. 140 "Battery Goes Dead." P. 203