

## Engine Does Not Start Even If the Throttle is Opened

---

Engine does not start even if the throttle is opened, perform the followings.

### If the side stand is down:

While the engine is stopped by the Idling Stop system, if you operate the side stand, the flashing Idling Stop indicator changes flashing to off, and the Idling Stop system is cancelled. Restart the engine with the start/Idling Stop button, referring to the starting procedure (▶ P. 110) for standard engine starting.

### If the rider does not sit astride the motorcycle:

When the rider has not been sitting astride the motorcycle for approx. 3 minutes, the Idling Stop indicator changes from flashing to off and you cannot restart the engine, even if you open the throttle. Restart the engine with the start/Idling Stop button, referring to the starting procedure for standard engine starting.

### If the start/Idling Stop button is operated:

While the engine is stopping by the Idling Stop system, if you press the start/Idling Stop button, the Idling Stop system will be cancelled.

Restart the engine with the start/Idling Stop button, referring to the starting procedure (▶ P. 110) for standard engine starting.

If the Idling Stop indicator flashes, but engine does not start even if the throttle is opened, perform the followings.

### Battery lead is loose:

Check the battery terminals.