

Front Wheel

Removal


1. **GL1800/D/DA**

Place your motorcycle on its center stand on a firm, level surface.


GL1800B/BD

Place your motorcycle on a firm, level surface.

- 2.** Remove the bolts, and then remove the front fender A forward.

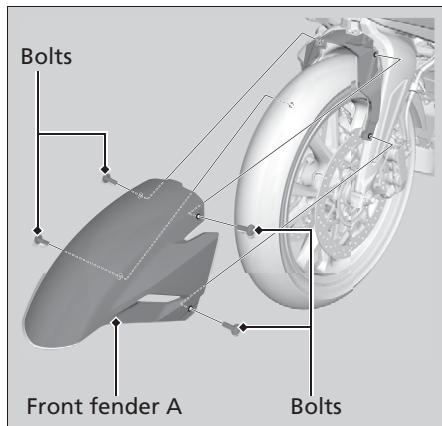

- 3.** Cover both sides of the front wheel and brake calipers with protective tape or cloth.

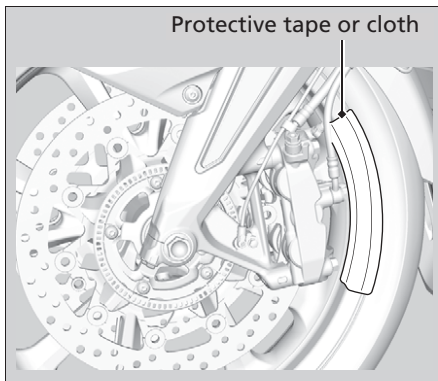

- 4.** Remove the bolt and wheel speed sensor.
- 5.** On the left side, remove the mounting bolts and remove the brake caliper.

