

iPod®/USB Flash Drive

USB Error Messages

(Models not equipped with Navigation System)

If an error occurs while playing an iPod® or USB flash drive, you may see the following error messages. If you cannot clear the error message, contact a dealer.

Error Message	Cause	Solution
BAD USB DEVICE	Problem with the device or USB cable.	Turn the ignition switch off once and turn it on again. Reconnect the device. Do not reconnect the device that caused the error.
CHECK USB	Problem with the device or USB cable.	Turn the ignition switch off once and turn it on again. Reconnect the device. Do not reconnect the device that caused the error.
USB ERROR	Problem with the device or USB cable.	Turn the ignition switch off once and turn it on again. Reconnect the device. Do not reconnect the device that caused the error.
NO SONG	No files in device.	Check the files in device.
UNSUPPORTED	Use of unsupported device.	Update the firmware. Use supported device.
UNPLAYABLE	Problem with the audio unit or device.	Turn the ignition switch off once and turn it on again. Reconnect the device.

(Models equipped with Navigation System)

If an error occurs while playing an iPod® or USB flash drive, you may see the error message. To clear the error message, turn the ignition switch off once and turn it on again, and/or reconnect the device.

If you cannot clear the error message, contact a dealer.