

Gauges & Indicators

(Models equipped with ABS)



Anti-Lock Brake System (ABS) indicator (amber)

Lights when there is any abnormality in the anti-lock brake system (ABS). Normally, this indicator comes on when the ignition switch is turned ON, and goes off after you ride the motorcycle at a speed above 6 mph (10 km/h). If the indicator comes on while riding, stop the motorcycle in a safe place and turn off the engine. Refer to *ABS Indicator Light*, [page 81](#). For information about ABS, see [page 80](#). *Lamp Check*.



CRUISE ON indicator (amber)

Lights when the CRUISE CONTROL master switch is on.



CRUISE SET indicator (green)

Lights when the cruise control SET/DECEL switch is on.



high beam indicator (blue)

Lights when the headlight is on high beam.



side stand indicator (amber)

Lights when the side stand is put down – to indicate that the side stand ignition cut-off system ([page 71](#)) is activated.