

Controls & Features

Start/Reverse Button



The start/reverse button is used for starting the engine. Pushing the start/reverse button in starts the engine. See *Starting Procedure*, [page 72](#).

When the start/reverse button is pushed, the starter motor will crank the engine; the headlight will automatically go out, but the taillight will stay on.

The starter motor will not operate if the engine stop switch is in the OFF position when the start/reverse button is pushed.

The start/reverse button is also used for reverse riding. See *Riding in Reverse*, [page 76](#).

Reverse (RVS) Switch

The reverse switch is used to shift into reverse gear so you may back up your motorcycle. For instructions, see *Riding in Reverse*, [page 76](#).

Cruise Control Switches

Three switches are used to activate, adjust, and de-activate the cruise control system: a CRUISE CONTROL master switch, a SET/DECEL switch, and a RESUME/ACCEL switch. For operating instructions, see *Riding with Cruise Control*, [page 91](#).