

Controls & Features

Rear Suspension Spring Pre-load Adjustment Switch

The rear suspension spring pre-load adjustment switch is used to adjust the rear suspension to suit your load and riding conditions. For instructions on when and how to adjust the rear suspension, see *Rear Suspension Spring Pre-load Adjustment*, [page 192](#).

Ventilation Controls

The windscreen ventilation louver is used to direct the flow of fresh air ([page 63](#)).

The foot warmer ventilation louvers are used to direct the flow of warm air ([page 64](#)).

Windscreen Height Adjustment

The windscreen height adjustment levers are used to raise or lower your windscreen to suit your riding preference. For instructions, see [page 62](#).