

# iPod<sup>®</sup>/USB Flash Drive

Select a playlist, artist, album and song by using the MODE knob/button. Push the MODE knob/button until iPod<sup>®</sup> menu is displayed, then turn the MODE knob/button until the desired list. Push the MODE knob/button to set your selection.

The display shows items on the selected list. Turn the MODE knob/button to select an item, then push the MODE knob/button to set your selection.

If you select “ALL”, all available files on the selected list are played. Selecting “RETURN” goes back to the previous display.

(Models not equipped with Navigation System)

Push the TITLE button to change the title display of albums, songs and artists. Push and hold the TITLE button to display the text data of albums, songs and artists from first 8 characters to next 8 characters.

Push the RETURN button to go back to the previous menu while selecting a playlist, artist, album and song.

(Models equipped with Navigation System)

Push the TITLE/RETURN button to change the title display of albums, songs and artists.

Push and hold the TITLE/RETURN button to display the text data of albums, songs and artists from first 16 characters to next 16 characters.

Push the TITLE/RETURN button to go back to the previous menu while selecting a playlist, artist, album and song.


(Models not equipped with Navigation System)

(Models equipped with Navigation System)


RETURN button

TITLE button

TITLE/RETURN button

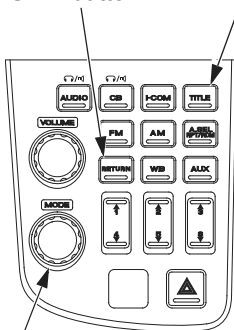

MODE knob/button

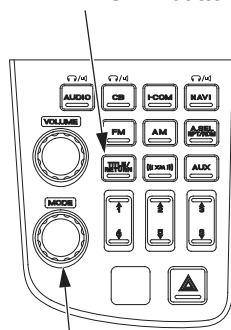

MODE knob/button