


# iPod®/USB Flash Drive

You can select repeat and random play modes when playing a file.


## To select a play mode

Push the A.SEL RPT/RDM button until the desired play mode is displayed. The display changes as follows each time the A.SEL RPT/RDM button is pushed.

(Models not equipped with Navigation System)

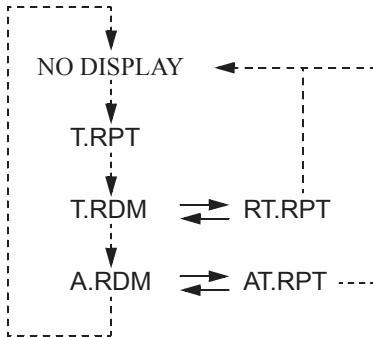

(Models equipped with Navigation System)

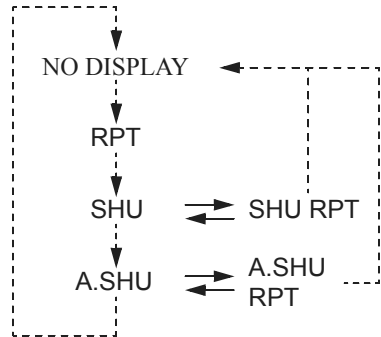

Push the A.SEL RPT/RDM button: - - - - ->

Push and hold the A.SEL RPT/RDM button: —————>

## Play Mode Menu Items

Not equipped with Navigation	Equipped with Navigation	Function
T.RPT	RPT	Repeats the current track.
T.RDM	SHU	Plays all available files in a selected list (playlists, artists, albums or songs) in random order.
A.RDM	A.SHU	Plays all available albums in random order.
RT.RPT	SHU RPT	Repeats current file in T.RDM/SHU play mode.
AT.RPT	A.SHU RPT	Repeats current file in A.RDM/A.SHU play mode.