

Coolant

Coolant Replacement

Refer to *Safety Precautions* on [page 154](#).

Coolant should be replaced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual ([page 270](#)).

WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

To properly dispose of drained coolant, refer to *You & the Environment*, [page 223](#).

NOTICE

Improper disposal of drained fluids is harmful to the environment.