

## Suspension

---

Each MEMO button stores only one pre-load position. Storing a new position erases the previous setting stored in that button's memory. If you want to add a new position while retaining the current one, use the other memory button.

All stored pre-load positions will be lost if your motorcycle's battery goes low (or dead) or is disconnected.

If "ERROR" blinks on the display, contact your dealer.

(Models not equipped with  
Navigation System)



(Models equipped with  
Navigation System)

