


# Cargo Compartment

## *Replacing the Battery*

When the remote transmitter's battery begins to get weak, it may take several pushes on the button to lock or unlock the compartments, and the LED will get dim. Replace the battery as soon as possible.

Battery type: CR2025

Recycle or dispose of batteries properly, according to local regulations. Improper battery disposal can harm the environment.

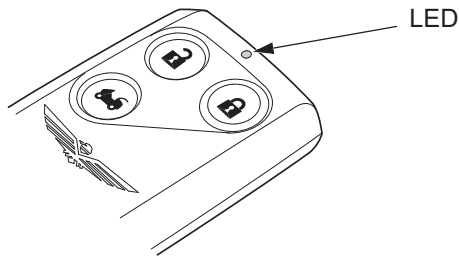

1. Dismantle by inserting a coin or a flat head screwdriver covered with a protective cloth into the slit of the transmitter.
2. Remove the old battery and note the polarity. Make sure the polarity of the new battery is the same (+ side facing up), then insert it in the transmitter.
3. Put the two halves of the transmitter back together.

