

iPod[®]/USB Flash Drive


You can select repeat and random play modes when playing a file.

To select a play mode


Push the A.SEL RPT/RDM button until the desired play mode is displayed.

The display changes as follows each time the A.SEL RPT/RDM button is pushed.

(Models not equipped with Navigation System)

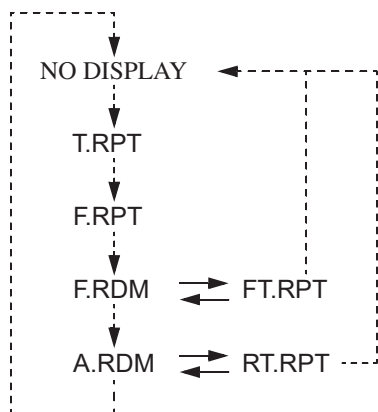

(Models equipped with Navigation System)

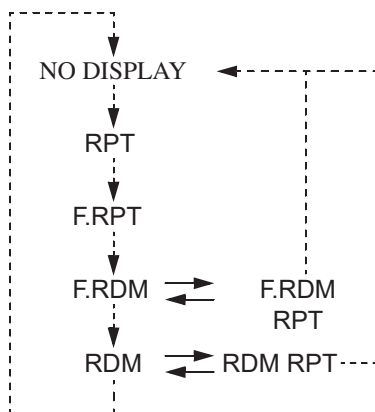

Push the A.SEL RPT/RDM button: ----->

Push and hold the A.SEL RPT/RDM button: —————>

Play Mode Menu Items

Not equipped with Navigation	Equipped with Navigation	Function
T.RPT	RPT	Repeats the current file.
F.RPT	F.RPT	Repeats all files in the current folder.
F.RDM	F.RDM	Plays all files in the current folder in random order.
A.RDM	RDM	Plays all files in random order.
FT.RPT	F.RDM RPT	Repeats current file in F.RDM play mode.
RT.RPT	RDM RPT	Repeats current file in A.RDM/RDM play mode.