


# Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

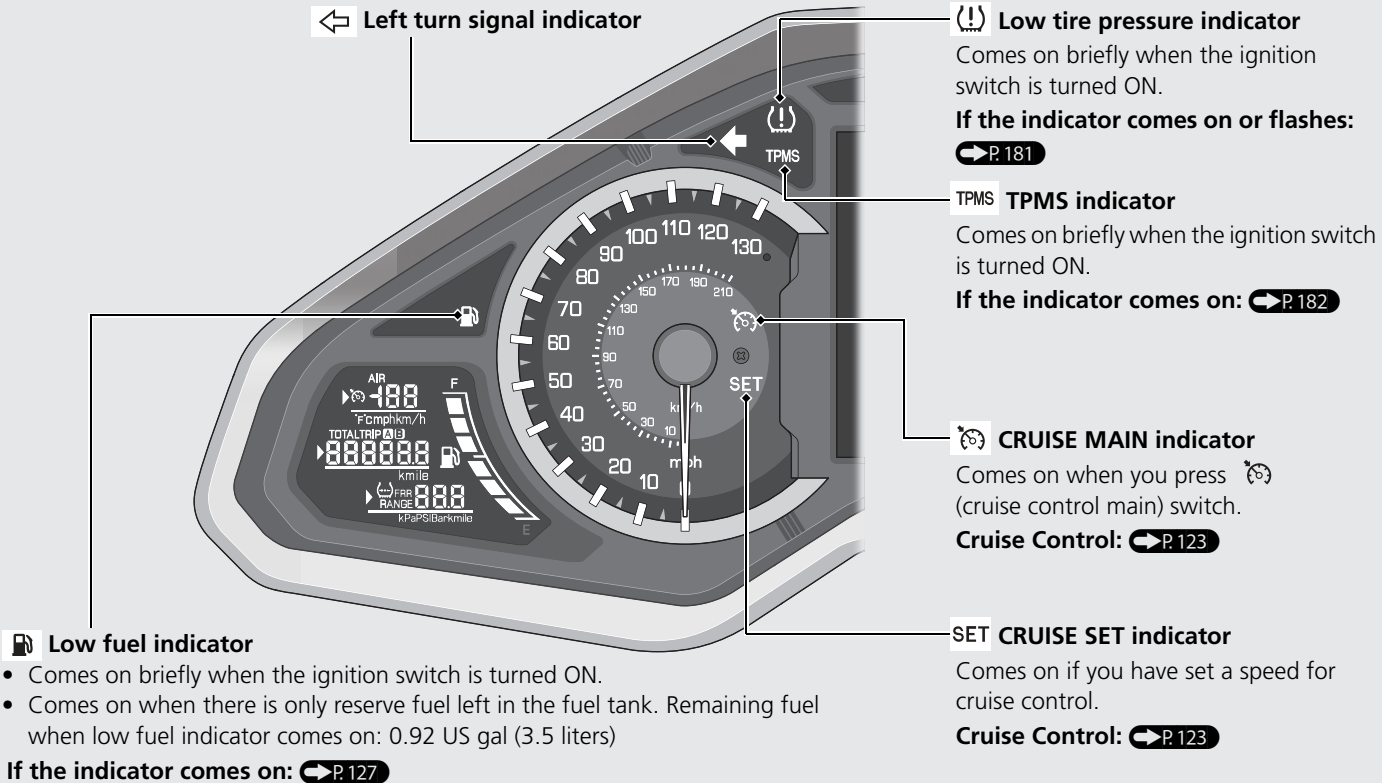

## Low fuel indicator

- Comes on briefly when the ignition switch is turned ON.
- Comes on when there is only reserve fuel left in the fuel tank. Remaining fuel when low fuel indicator comes on: 0.92 US gal (3.5 liters)

If the indicator comes on: ➔ P.127

## Low tire pressure indicator

Comes on briefly when the ignition switch is turned ON.

If the indicator comes on or flashes:


➔ P.181

## TPMS TPMS indicator

Comes on briefly when the ignition switch is turned ON.

If the indicator comes on: ➔ P.182

## CRUISE MAIN indicator

Comes on when you press  (cruise control main) switch.

Cruise Control: ➔ P.123

## SET CRUISE SET indicator

Comes on if you have set a speed for cruise control.

Cruise Control: ➔ P.123