







## Audio System (Continued)


### To Delete the Paired Device

- 1 Select [Bluetooth setting], and then press  or **ENT** switch.
- 2 Select [Phone pairing], [Rider HS pairing] or [Passenger HS pairing], and then press  or **ENT** switch to enter the setting menu.
- 3 Select the paired device, and then press  or **ENT** switch.
- 4 Select [Delete pairing], and then press  or **ENT** switch.

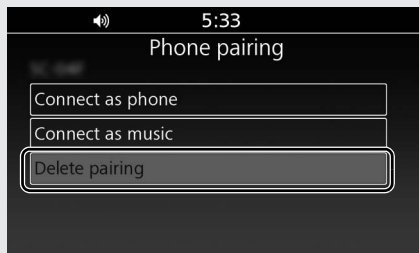

- 5 A confirmation message appears on the screen. Select [YES], and then press  or **ENT** switch.






- 6  (Bluetooth® icon) disappears from the screen.

### To Connect/Disconnect Available Functions Individually

Depending on the connected device, this function may not be able to establish a connection.



- 1 Select [Bluetooth setting], and then press  or **ENT** switch.
- 2 Select [Phone pairing], [Rider HS pairing] or [Passenger HS pairing], and then press  or **ENT** switch to enter the setting menu.
- 3 Select the paired device, and then press  or **ENT** switch.