


Replacing the Honda SMART Key Battery

If the Honda SMART Key indicator flashes 5 times when the ignition switch is turned ON, the low battery pop-up information appears, or the operating range becomes unstable, replace the battery as soon as possible.

We recommend to see your dealer for this service.

Battery type: CR2032

1. Push the release button and remove the built-in key from the Honda SMART Key.

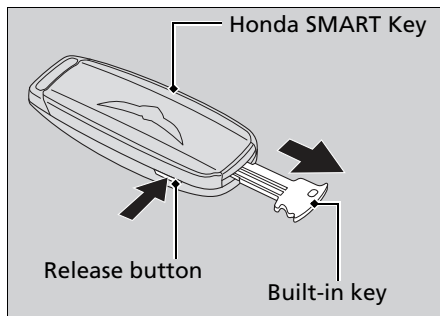

2. Slightly insert the built-in key from the opposite side into the key hole.

3. With the emblem upward, separate the Honda SMART Key by prying the built-in key as shown in the illustration.
 - ▶ Do not pry the built-in key forcibly.
 - ▶ Do not touch the circuit or terminal. This may cause problems.
 - ▶ Be careful to avoid scratching the waterproof covering or allowing dust to enter.
 - ▶ Do not forcibly dismantle the Honda SMART Key body.

