



Engine servicing

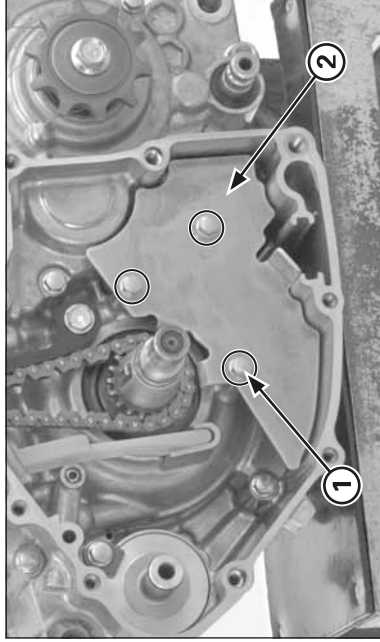

- (1) BOLTS
- (2) CAM CHAIN GUIDE PLATE

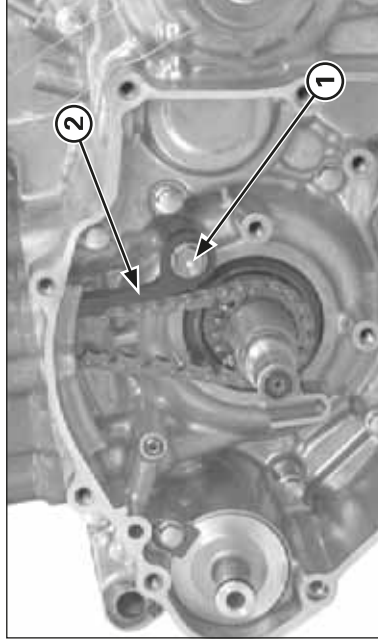


- (1) BOLT
- (2) CAM CHAIN TENSIONER

Remove the following:

- Cylinder head (page 4-23)
- Left crankcase cover (page 4-49)
- Flywheel (page 4-52)

Remove the bolts and cam chain guide plate.


Remove the bolt, cam chain tensioner, pivot collar and washer.

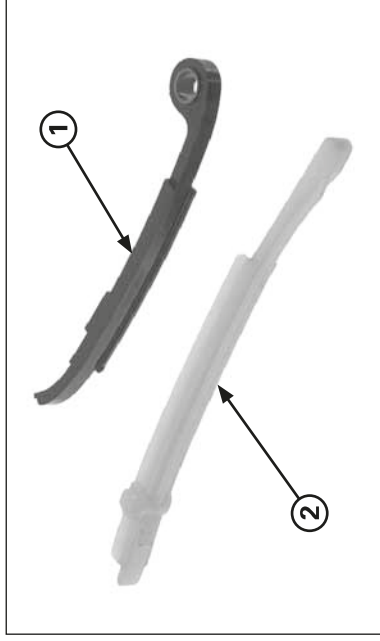


- (1) CAM CHAIN TENSIONER
- (2) CAM CHAIN GUIDE

Inspection

Inspect the cam chain tensioner and cam chain guide for excessive wear or damage, replace if necessary.

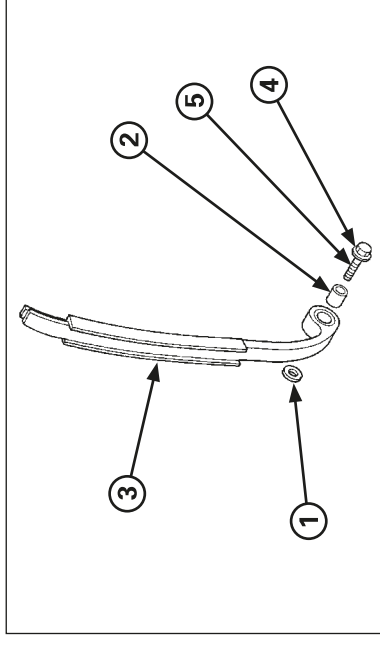

- (1) WASHER (2) PIVOT COLLAR
- (3) CAM CHAIN TENSIONER
- (4) PIVOT BOLT (5) APPLY LOCKING AGENT

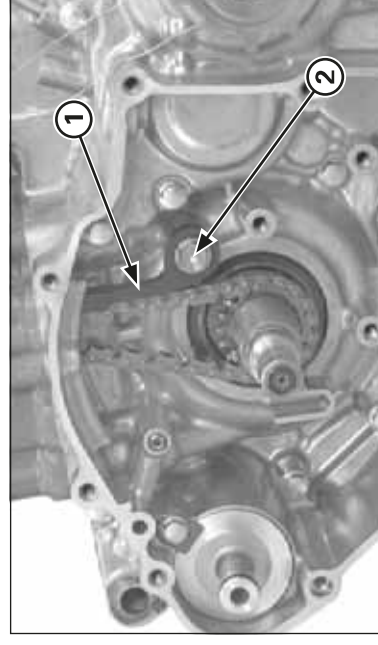

- (1) CAM CHAIN TENSIONER
- (2) PIVOT BOLT

Installation

Apply a locking agent to the cam chain tensioner pivot bolt thread.
Install the washer, cam chain tensioner, pivot collar and pivot bolt.

Tighten the pivot bolt to the specified torque.

Torque: 12 N•m (1.2 kgf•m, 9 lbf•ft)