

## Air cleaner

### Disassembly

Remove the seat box-rear fender assy. 2 P. 54

- 1** Remove the four bolts and air cleaner housing cover.
- 2** Remove the air cleaner element assembly from the air cleaner housing.
- 3** Remove the mesh device from the air cleaner element.
  - u Check the mesh device for damage and replace it if necessary.
  - u Thoroughly wash the air cleaner element in clean non-flammable cleaning solvent, then wash in a solution of hot water and liquid dish-washing soap. Apply special air cleaner oil or engine oil to the element and remove the excess oil.
  - u Clean the inside of the air cleaner housing.

