

Changing the engine oil and filter

Special tools are required to change the oil and filter. It is recommended for the motorcycle to be serviced by the dealer.

Use a Montesa genuine oil filter or equivalent specified for your model.

NOTICE

Using the wrong oil filter could cause serious damage to the engine.

1. Change the engine oil with the engine warm.
2. Park on a firm, level surface and lower the side stand.
3. Remove the bolts and engine skid plate.

4. Remove the oil filler cap / dipstick.
5. Place a drainage container under the drain bolt.
6. Remove the drain bolt and sealing washer to drain the oil.
7. Remove the drive sprocket cover.
8. Remove the left crankcase cover and the cover seal.
9. Dispose of the oil and oil filter at an approved recycling centre.
10. Remove the bolt, the mounting plate and the oil and filter cover.
11. Remove the oil filter cover and O-rings.
12. Remove the oil filter and spring.
13. Apply grease to the end of the oil filter spring. Install the spring on the new oil filter.