

Checking the drive chain slider

1. Check the drive chain slider for wear or damage.
 - ⌋ If the wear is 2.0 mm (0.08 in) or more, replace the slider.
2. Check the drive chain tensioner slider for wear or damage.
 - ⌋ If the wear is 2.0 mm (0.08 in) or more, replace the slider.

