


**Installation**

1. To install the rear wheel, reverse the removal procedure.
  - U Prevent the brake caliper from scratching the wheel during installation.

**NOTICE**

When installing brake caliper in its correct position, carefully fit the brake disc between the brake pads to avoid damaging the pads.

2. Make sure that the groove supporting the brake caliper is positioned in the swingarm anchor.

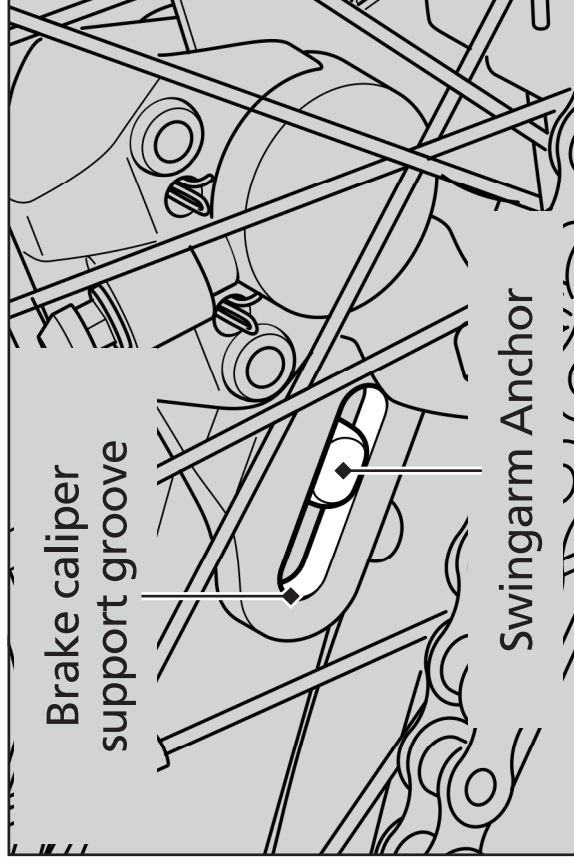

3. Adjust the drive chain. 2 P. 68
4. Insert and tighten the rear axle nut.

**Torque:** 70 N•m (7.0 kgf•m).

5. After installing the wheel, apply the brake pedal several times and then recheck the wheel, making sure it can rotate freely. Recheck the wheels if the brake drags or if the wheels does not rotate freely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to the loss of braking capability.