

## Instruments, controls and other features

### Total odometer

The screen is reset to 0.0 once the reading exceeds 999.999.

### Tripmeter

The Trip 1 and Trip 2 partial odometers are reset to 0.0 once the reading exceeds 999.9.

### Document bag

The owner's manual, as well as registration and insurance information, can be kept in the plastic document bag located under the seat. 2 P. 34

### Ignition cut-off system

An angle sensor (bank angle) stops the engine and fuel pump after a few seconds in the event that the motorcycle tips over.