


Seat box- rear fender assy

- 1 Remove the seat. ➔ P. 53
- 2 Remove the right / left side covers. ➔ P. 55
- 3 Remove the top bolts from the front covers.
- 4 Remove the rear screws of the front covers inside the seat box.
- 5 Remove the front relay support bolts.
- 6 Remove the rear bolts, washers and bearings fastening the seat box onto the filter box supports.

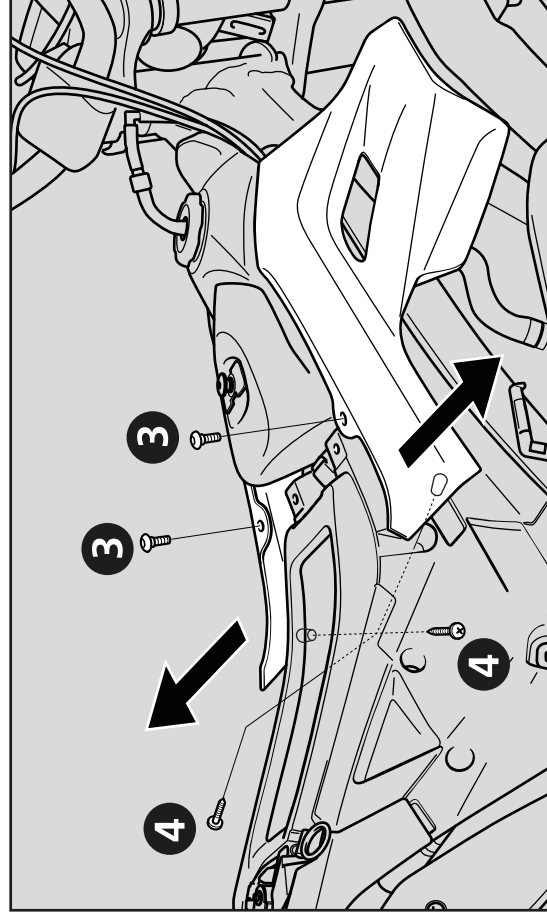

- 7 Remove the screw on the right lower side cover.
- 8 Take off the front covers and gently lift out the seat box- rear fender assy.
 - ▶ Disconnect the electrical installation.
- 9 Remove the seat box- rear fender assy.

