


Checking the coolant

Always make sure that the engine and the radiator have cooled before checking the coolant level.

- 1.** Position the motorcycle on a firm, level surface.
- 2.** Remove the upper radiator mounting bolt.
- 3.** Move the upper part of the radiator forward and remove the radiator cap.
- 4.** Check that the coolant level reaches the neck of the filler hole.

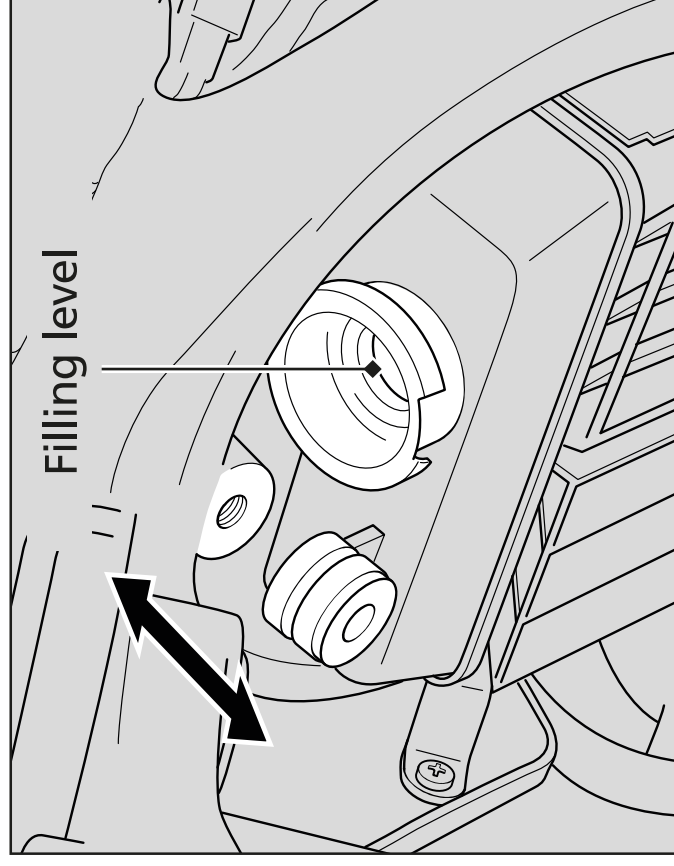

If the coolant level drops noticeably, it is likely that there is a serious leak. Have your dealer inspect the motorcycle.