

Parts Location

Rear brake fluid reservoir → P.58

Fuse box → P.87

Battery → P.53

Front brake fluid reservoir → P.58

Throttle grip → P.68

Engine oil fill cap/dipstick → P.54

Air cleaner → P.57

Spark plug → P.70

Engine oil drain bolt → P.55

