


## Display Check

When the ignition switch is turned on, all the mode and digital segments will show. If any part of these displays does not come on when it should, have your dealer check for problems.

### Speedometer

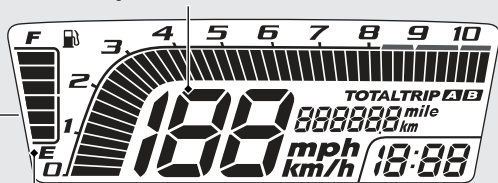

### Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing:  
approximately 0.375 US gal (1.42 L)

**If the fuel gauge indicator flashes in a repeat pattern or turns off:**  **P.80**

