

# Indicators & Displays

---

## **N** Neutral Indicator

This indicator comes on and stays on when the transmission is in neutral.

## **R** Reverse Indicator

This indicator comes on and stays on when the transmission is in reverse.

## Parking Brake Indicator

This indicator comes on and stays on when the parking brake is on.

## **4WD** 4WD Indicator

This indicator comes on and stays on when the drive mode is in the 4WD rear diff lock mode.



## Front Differential Lock Indicator

When the drive mode is 4WD all diff lock mode, this indicator comes on and stays on along with the 4WD indicator.



## High Coolant/Oil Temperature Indicator

This indicator comes on and stays on when either the coolant temperature or the engine oil temperature is high enough to adversely affect the service life of the engine. If this indicator comes on while you are driving, stop as soon as possible, turn the engine off, and let it cool. The indicator also comes on for a few seconds when you turn the ignition switch to the ON ( I ) position.