

# Indicators & Displays

---

## Hourmeter (U, CM type only)

When selected, the hourmeter shows accumulated hours while the ignition is ON ( I ). The hourmeter provides accurate service period information for initial and regular maintenance. To change the display from odometer or tripmeter to hourmeter, press and release the hourmeter/odometer/tripmeter select button. The hourmeter mark will appear.

