

Doors

If the doors are shaky when closed, turn the door stopper counterclockwise to adjust the doors.

The left and right doors can be adjusted in the same manner.

Adjust

1. Open the door (page 31).
2. Turn the door stopper counterclockwise.
3. Make sure the door is closed securely.

