

Side Nets

The left and right side nets can be opened in the same manner.

Open


1. Release the side net buckle.
2. Hook the side net ring onto the side net hook while lifting the side net.

Close

1. Unhook the side net ring from the side net hook.
2. Fasten the side net buckle.

Do not drive the Honda MUV with the side net open.

LEFT SIDE OUTSIDE

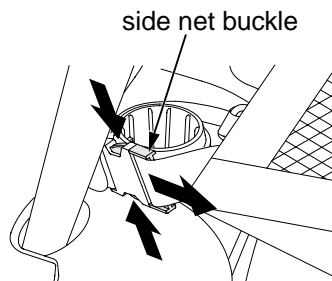

LEFT SIDE INSIDE

