

# Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).												
FREQUENCY (Whichever comes first)		Initial maintenance	Regular maintenance interval							Note	Refer to page	
			× 100 mi	1	6	12	18	24	30			36
ITEMS		× 100 km	1.5	10	20	30	40	50	60			
		Hours	20	100	200	300	400	500	600			
		Month	1	12								
Check engine oil and coolant		Check oil and coolant at fuel stop								99,112		
Check tires		Check inflation and condition once a month								143		
Check brake fluid		Check fluid level once a month								135		
Replace engine oil and oil filter		●		●	●	●	●	●	●	101		
*	Inspect valve clearance	●	Every 600 miles (1,000 km) or 100 operating hours, otherwise adjust only if noisy								—	
*	Clean spark arrester		Every 600 miles (1,000 km) or 100 operating hours, whichever comes first								131	
	Clean air cleaner elements										1	117
	Check air cleaner housing drain tube										2	120
	Check spark plug											128
*	Inspect idle speed	●								—		
*	Check fuel lines and connections			●		●		●		—		
	Check front and rear brakes	●			●			●	3	134		
	Check front and rear differential oil	●								107,109		

- \* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 210).

Note 1 Service more frequently when operating in dusty areas, sand or snow.

Note 2 Service more frequently when operated in muddy, very wet conditions, or freezing temperatures.

Note 3 Service more frequently when operated in muddy conditions.