

Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).											
FREQUENCY (Whichever comes first)		Initial maintenance	Regular maintenance interval						Note	Refer to page	
		× 100 mi	1	6	12	18	24	30			36
ITEMS		× 100 km	1.5	10	20	30	40	50	60		
		Hours	20	100	200	300	400	500	600		
		Month	1	12							
	Lubricate all hinges, latches, and pivots										121
**	Inspect the following items:										—
	Suspension components										—
	Wheels										150
	Driveshaft boots					●				●	151
	Accelerator and brake pedals										126,139
	Brake light switch										141
	Exhaust system										133
	Battery terminal condition										154
*	Rotate tires			Recommend 1,800 miles (3,000 km) Depending on tire wear condition							149
	Check parking brake adjustment		●								—
**	Inspect the following items:										—
	Tie-rod ends										—
*	Steering gearbox and boots									●	—
*	Brake hoses and lines										—
*	MUV underbody										4
	Replace the following items:										—
*	Front and rear differential oil			Every 2 years (regardless of mileage)							108,110
*	Engine coolant										114
*	Brake fluid										—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 210).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.

Note 4 Check the underbody whenever the under guard has been hit.