

# Front Hood


---

Refer to *Safety Precautions* on page 77.

The front hood must be opened for battery maintenance, fuse maintenance, access to the owner's manual, to lubricate the front hood pivot, drive mode select lever pivot and shift lever pivot, to check the brake fluid level, brakelight switch adjustment and throttle cable adjustment, and to check the coolant level.

## Open

1. Unhook the front hood band.
2. Lift the front hood.

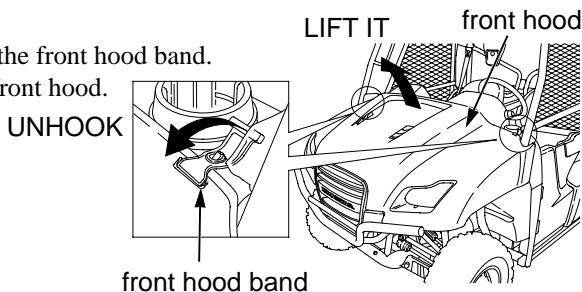

## Close

1. Close the front hood and prongs into the console cover.
2. Press down on the front hood until the hood lock plate fits into the console cover frame.
3. Hook the front hood band securely.

## CLOSE THE FRONT HOOD

