

# Engine Oil & Filter

## Changing Engine Oil & Filter

Refer to *Safety Precautions* on page 77.

Your Honda MUV's oil filter has very specific performance requirements. Use a new Honda Genuine oil filter specified for your model or a filter of equal quality.

### NOTICE

*Using the wrong oil filter may result in leaks, premature wear, or engine damage.*

This procedure requires mechanical skill and professional tools such as a torque wrench, and access from underneath the vehicle, as well as the means for disposing of the drained fluid (page 170). If you do not have the skills or the tools, see your Honda dealer.

### *Drain the Engine Oil:*

1. Make sure the Honda MUV is parked on level ground. Set the parking brake, and jack up and support your Honda MUV (page 92).
2. Remove the left seat (page 91) and rubber dust cover.
3. Remove the oil filler cap.

### UNDER LEFT SEAT

