

Front Differential Oil

Oil Recommendation

| | |
|--------------------|---|
| API classification | GL-4 or GL-5 except oils labeled as energy conserving on the circular API service label |
| type | hypoid gear oil |
| viscosity (weight) | SAE 80 |
| suggested oil | Honda shaft drive oil or equivalent |

Checking Oil

Refer to *Safety Precautions* on page 77.

Check the differential oil level every 1,800 miles (3,000 km) or 300 hours of operating your Honda MUV and add, if needed.

1. Park your Honda MUV on a firm, level surface.
2. Remove the oil filler cap.
3. Make sure the oil level is at the lower edge of the oil filler inspection hole.
4. Install and tighten the oil filler cap to the specified torque:
9 lbf•ft (12 N•m , 1.2 kgf•m)

LEFT FRONT

