

# Rear Differential Oil

## Oil Recommendation

API classification	GL-4 or GL-5 except oils labeled as energy conserving on the circular API service label
type	hypoid gear oil
viscosity (weight)	SAE 80
suggested oil	Honda shaft drive oil or equivalent

## Checking Oil

Refer to *Safety Precautions* on page 77.

Check the differential oil level every 1,800 miles (3,000 km) or 300 hours of operating your Honda MUV, and add if needed.

1. Park your Honda MUV on a firm, level surface.
2. Remove the oil filler cap.
3. Make sure the oil level is at the lower edge of the oil filler inspection hole.
4. Install and tighten the oil filler cap to the specified torque:  
9 lbf·ft (12 N·m , 1.2 kgf·m)

### RIGHT REAR

