

Lubrication

To keep moving parts functioning properly, coat them with a multi-purpose grease (without Teflon or molybdenum additives, such as CRC 6-56 or equivalent).

Provide lubrication when moving parts do not work smoothly. Also lubricate according to the maintenance schedule (page 81).

Consult your Honda dealer for more information about lubrication procedures.

Apply grease to each pivot to prevent corrosion. Check for smooth movement after lubrication. If the movement is not smooth after applying grease, see your Honda MUV dealer.

Lubrication Points

Lubricate the front lid pivots as shown in following illustration. Open the front hood (page 90).

