


# Lubrication

---

Lubricate the drive mode lever pivot and shift lever pivot as shown in the following illustration.

Open the front hood (page 90).

## UNDER FRONT HOOD

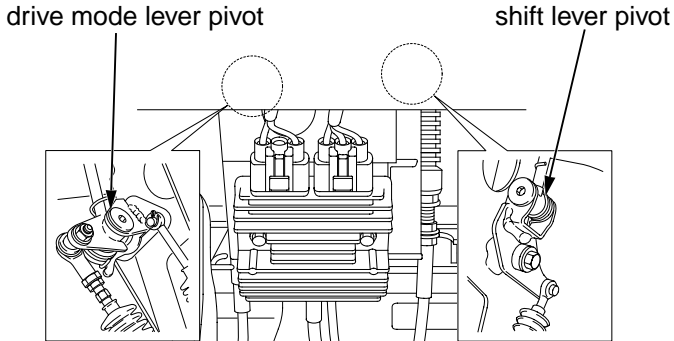

Lubricate the door latch as shown in following illustration.

Open the door (page 31).

