

Brakes

Check the pad for wear.

1. Remove the wheels (page 180).


2. Check the wear indicator groove in the pad.

If pad is worn to the bottom of the grooves, replace both pads as a set.

See your Honda dealer for this service.


FRONT

wear indicator groove

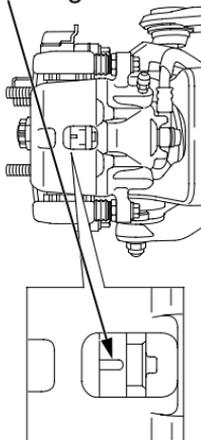

REAR

wear indicator groove

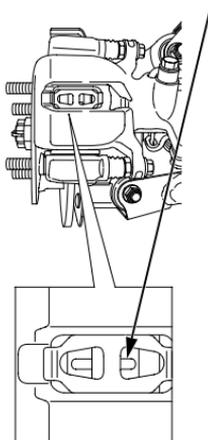

Always inspect both pads in both the right and left brake calipers.