

Storing Your Honda

Removal from Storage

Refer to *Safety Precautions* on page 77.

1. Uncover and clean your Honda MUV.
2. If your Honda MUV has been stored for more than four months—change the engine oil (page 101).
3. If your Honda MUV has been stored for more than two months—ask your Honda dealer to drain and replace the fuel.
4. Charge the battery (page 156) as required. Install the battery.
5. Perform a pre-drive inspection (page 52), then test-drive your Honda MUV at low speeds.